

Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

Kit Components:


<u>Qty.</u>	<u>Part Description</u>	<u>Qty.</u>	<u>Part Description</u>
1	Windshield	4	10mm Nut
2	Angle Bracket	6	PPHS 1/4-20 x 1
2	Threaded Rod	6	1/4" Flat washer
2	Adjuster Tube	6	1/4" flat washers
2	Handle Bar Clamps	6	1/4" Nylock Nut
4	Rubber Grommets		
4	Grommet washers		

Tools required for installation:

- #2 Phillips screw driver
- 4mm Allen wrench
- 17mm wrench
- 7/16" wrench

INSTALLATION INSTRUCTIONS

1. Prepare windshield assembly. Install the Angle Brackets to the windshield by pressing the four rubber grommets into holes in the windshield. Insert the four aluminum spacers into the grommets from the backside. Install the Angle Bracket to the back of the windshield using four 1/4 - 20 screws, four 1/4" washers, four 1/4" Nylock nuts. Make sure Angle Bracket is mounted as shown.
2. Install the handlebar clamps to the upward sweep section of the handle bars. Thread the threaded rod/adjuster tube into the handlebar clamp. Thread into handlebar clamp at least 1/2". Tighten the nut onto the handlebar clamp using a 17mm wrench. Do not tighten the nut onto the adjuster tube at this time. You will use this to adjust your windshield in step 4.
3. Install windshield by sliding the angle bracket into the slot on the adjuster tube. There are 5 holes on the angle bracket. Choose the one that mounts your windshield in the position that suits you. It is best to use a hole that is close to the center of the bracket. Before attaching the windshield adjust the adjuster tube in or out. This will adjust how far or close to the handlebars your windshield is. Check clearances by turning your bars all the way to the left and right. Attach windshield using 1/4-20 screws, small washer and 1/4" Nylock nut.
4. Align the windshield to suit your preference. There are five ways to adjust your windshield: 1. The handle bar clamps can be moved up and down on the handlebar to adjust the height of your windshield, 2. The handlebar clamps can spin on the handle bars to change the angle of the adjuster tube., 3. The adjuster tube can be adjusted in or out to change the distance your windshield is from your handlebars., 4. The mounting holes on the angle bracket can be adjusted to change the height of the windshield., 5. The angle of the windshield can be adjusted by rotating the windshield on the angle bracket. It is acceptable to experiment with all these adjustments to achieve a windshield placement that is best suited for you and your needs.

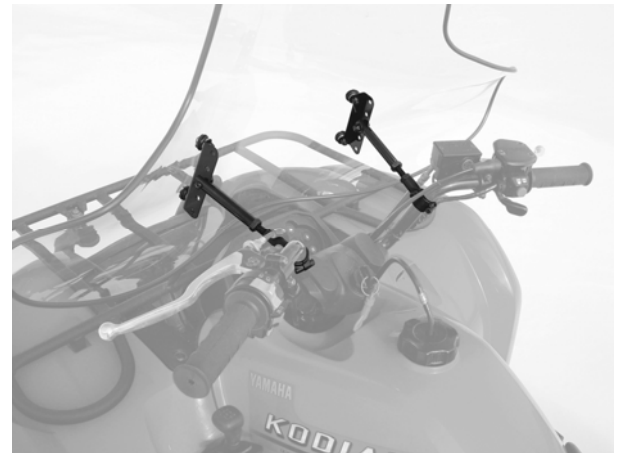

After final adjustments are made check for clearances when turning handlebars from side to side. If there are no clearance issues go ahead and tighten the 10mm nut on the adjuster tube using a 17mm wrench. Tighten the handlebar clamps using a 4mm allen wrench. Tighten the adjuster tube on to the angle bracket using a phillips screw drive and 7/16 wrench.