

Clutch Spring Tool Instructions



Remove the Spider from the Clutch Spring Tool.



(2). Set the Clutch on the base.

(Note): Notice the 2 bevels on the base, one is for Secondary's, one is for Primary's)

- (3). Run the spider with handle down until snug against the Cap.
(Pictured Below) You can mount it in a vise or on your Work Bench.



- (4). Remove the 3 screws holding the spring cap in place.
(5). Back the Spider off using the handle until the pressure from spring is completely released.
(6). Repeat steps in reverse order to reinstall Spring Cap.