

POWERMADD® Power-Lift

Installation Instructions for Part No. 13515

UNASSEMBLED PARTS:

Qty	Description
1	Base
1	Center Post
1	Lynch Pin
1	Handle Assembly
2	Bolt
2	Nut

TOOLS REQUIRED:

12mm Wrench
13mm Wrench
14mm Wrench

WARNING: The lynch pin in the handle linkage needs to be removed to operate the lift, but should be installed while the snowmobile is lifted to ensure that someone doesn't lower the snowmobile at the wrong time or by accident.


LIMITED WARRANTY

POWERMADD warrants this product to be free from defects in material and workmanship under use for the purpose it was intended.

POWERMADD shall not be liable for damage or injury caused by defective materials or workmanship. **POWERMADD** may elect to repair or replace this product, but is the sole judge of any defects in their product. This warranty does not cover any labor costs to remove or reinstall this product and is effect for one year from the original purchase date.

POWERMADD®
1-800-435-6881
www.powermadd.com

STEP 1: Attach the center post to the base using the bolts and nuts supplied. Tighten them until there is no movement between the base and the center post.

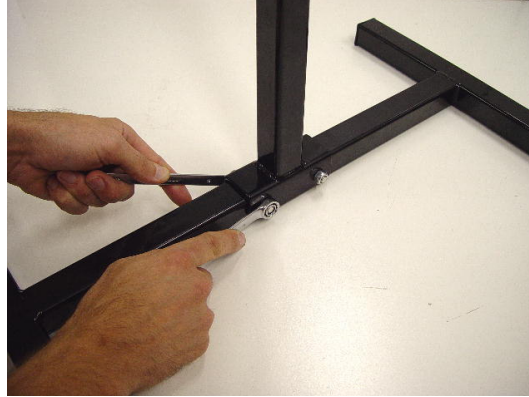

STEP 2: Slide the handle assembly into the center post and install the lynch pin through the hole to achieve the desired lift height.



STEP 3: Tighten the bolt that goes through the hook and linkage until the hook doesn't pivot, then back the nut off 1/2 turn so the hook pivots freely.



STEP 4: Tighten the bolt that goes through the handle and linkage until the linkage doesn't pivot, then back the nut off 1/4 turn so the linkage pivots freely.

