

Cageless Bearing Piston Pin Remover Instructions



1st step.

Remove the Circlips that are holding the Piston Pin inside the piston. Then place the Piston Pin Remover with one slug on the piston and snug it down



2nd step.

Screw the Plastic slug into the Piston while gently holding up on the piston itself. You will feel the piston come loose from the Connecting Rod. At this point you back out the handle. The plastic slug will stay inside the Connecting Rod holding the Bearings in place

3rd step.

Once you have backed out the handle completely lift the piston off of the Connecting Rod. Rap black tape around the top of the Connecting rod to hold the slug and bearing inside the rod.

Second slug is included for the 2nd piston

