



INSTALLATION INSTRUCTIONS

Pop Up Rave Caps

1. Remove the red adjustment plug from the center of your stock cap. Drill a 17/64" hole in the center of red adjustment plug. **Be sure hole is centered and drilled straight.**
2. Set the aluminum button on the RAVE stem and place spring over button.
3. Install red plug in cap, with top of plug flush with top of cap.
4. Carefully guide cap down over button and secure cap with retainer clip.
5. Using a secure track stand, raise track off ground and run engine. As RPM's raise to about 6000 plugs should start to move. To synchronize turn red plugs in or out so that both valves open at same time. To check for dirty or sticky valves, just repeat this and watch pop-ups to insure that valves are both opening. **Warning: when running snowmobile on stand, be sure it is secured and have the skis against a wall.**
6. If after reading instructions you feel uncomfortable with process, contact your local dealer.
7. Pop-up Rave Caps are custom by nature, to be installed by buyer, and are sold without any express or implied warranty of merchantability or fitness for a particular purpose. HPE shall not be held liable for any special, incidental, or consequential damages, including damage, loss of revenue, cost purchased or use of this product.

Thank you for choosing HPE for your snowmobiling needs.