

POWERMADD[®] Spare Oil & Storage

Mounting Instructions for: FireCat S.O.S. Part No. 14809

HARDWARE INCLUDED:

Item	Qty	Description
1	1	Oil Carrier
2	1	Mounting Bracket
3	2	Carriage Bolt
4	2	Locking Nut
5	2	Bumper
6	1	Rubber Strap

TOOLS REQUIRED:

½" Wrench or Socket & Ratchet
Spring Removal Tool
3/8" Wrench

WARNING: Read all instructions prior to installation. Never work on a snowmobile with the engine running.



NOTE: The S.O.S. mounts directly to the chain case, but the oil in the chain case does not need to be removed for installation and will not leak from the chain case as long as the instructions are followed.

Step 1: Mount the bracket to the carrier using the two carriage bolts and lock nuts provided. Line up the correct numbered hole on the bracket with the correct numbered hole on the carrier.

Step 2: Attach the two bumpers to the back of the carrier. **NOTE:** The adhesive is pressure sensitive, so the more pressure you apply during installation the better they will adhere. The bumpers cannot be removed and repositioned, be sure they are positioned correctly on the first try.

Step 3: Remove the two chain case cover bolts where the bracket will mount. Arrows in the picture point to the bolts which need to be removed.

Step 4: Place the S.O.S. in position on the chain case and reinstall the two bolts.

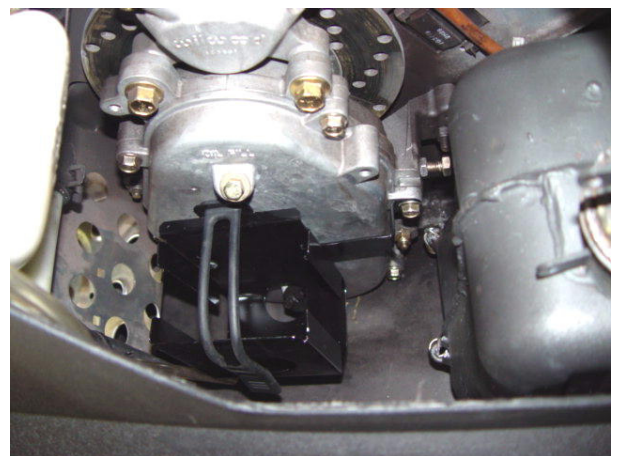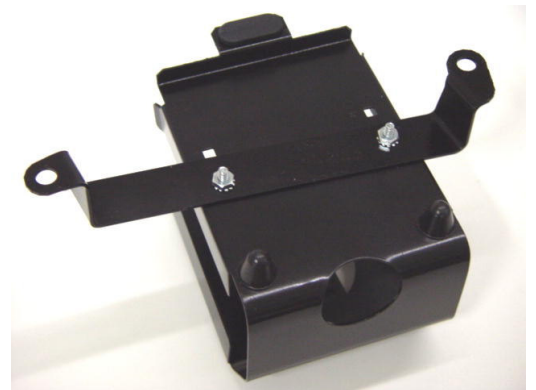

LIMITED WARRANTY

POWERMADD warrants this product to be free from defects in material and workmanship under use for the purpose it was intended. POWERMADD shall not be liable for damage or injury caused by defective materials or workmanship. POWERMADD may elect to repair or replace this product, but is the sole judge of any defects in their product. This warranty does not cover any labor costs to remove or reinstall this product and is effect for one year from the original purchase date.

POWERMADD[®]

1-800-435-6881

www.powermadd.com

PP5045 REV A