


## POWER BREATHER INSTRUCTIONS PART #200-594

Cut tabs for 99 models and use the screw holes to mount cover

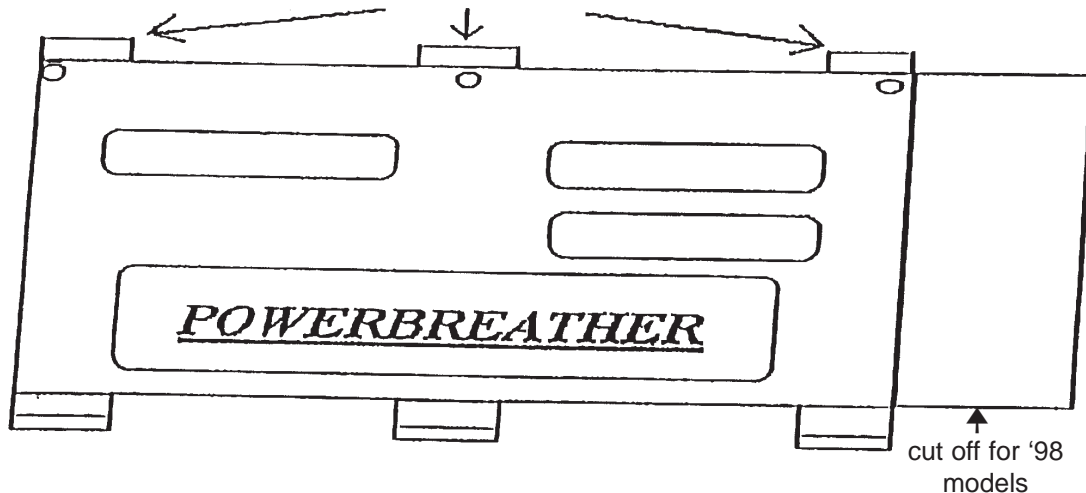

Mount coils on front side of air box using bolts and spacers from coil plate. On ZR 700 models, mount CDI between air box and oil bottle.

### JETTING SPECS 0-2000 FT ALT 10-30° F

On ZR models use stock main jets  
500 & 600 models only take cones out

When using twin pipes.....

99 TC 1000 - Stock pilots - Q-5 (480) Needle Jets - 400-420 Main Jets

99 ZRT 800 - 25 Pilots - 3.0 cutaways - fuel screw at 1/2 turn  
390-410 Main Jets - Needles in 3rd clip

99 ZRT 600 - Stock jetting  
All 2000 & 2001 models - Use stock main jets  
Turn fuel screws out 1 1/2 more turns from stock

10° and below install inserts over intake of breather for safe jetting

On 2001 models, disconnect the kill switch wire and relocate under the air box by the throttle cable and reconnect to switch.