



Uses existing needle.

Kit consists of 4 - .020 shims

Decide whether you need a richer or leaner midrange. This system works from 1/4 throttle to 3/4 throttle.


Remove the top of your carbs per OEM instructions. Compressing spring with one hand, remove the plate and needle from the slide.

Note e-clip position on the needle and carefully remove.

Always position shims ***BELOW*** e-clip.

When moving, start with one shim and work up.

Use caution each time you remove the needle, clip and washer. It's best to work inside of a plastic bag to prevent losing the small parts.

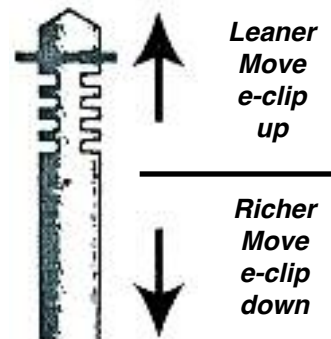

For best calibration and results, use EGT (Exhaust Gas Temperature) gauges.

Consult your dealer if you have any questions.