

CALIBER[®] Grips[™]

Installation Instructions for Part No. 13200

HARDWARE INCLUDED:

Qty	Description
6	15" Grips
37	#8 x 1" Stainless Steel Screws

TOOLS REQUIRED:

- Power Phillips Screwdriver
- Tape Measure
- Pencil or Marker

READ ALL INSTRUCTIONS CAREFULLY PRIOR TO ASSEMBLY

Step 1: Find the center the traction area on the trailer deck. Mark this on the trailer deck at the rear of the trailer.


Step 2: Place the first Grip at the very rear of the trailer deck centered on the mark from **Step 1**.

Step 3: Layout the remaining 5 Grips on the deck, making sure the Grips are 10 inches apart from center to center.

CAUTION: Before installing screws, check for adequate clearance where marker lights and wires have been installed under the trailer deck.

Step 4: Use a power screwdriver to fasten the Grip to the deck using 6 screws per Grip. Place the corner screws 1" from the edge of the Grip, and center the 2 middle screws. **NOTE:** The screwdriver should be powerful enough to drive the screws through the Grip and into a wood deck without pre-drilled holes.

WARNING: CALIBER Grips are designed to add traction to the trailer deck for the snowmobile track, but are slippery, especially when wet or covered with frost, ice and/or snow. Extreme caution should be taken when walking or climbing on any trailer deck on which Grips are installed. Always load snowmobiles at low speeds using extreme caution.

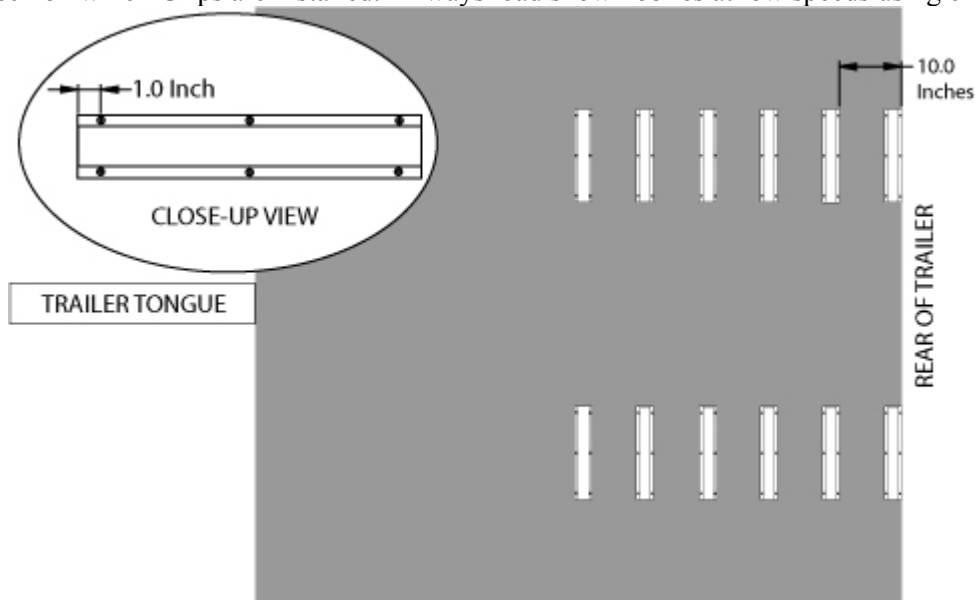

LIMITED WARRANTY

CALIBER warrants this product to be free from defects in material and workmanship under use for the purpose it was intended. CALIBER shall not be liable for damage or injury caused by defective materials or workmanship. CALIBER may elect to repair or replace this product, but is the sole judge of any defects in their product. This warranty does not cover any labor costs to remove or reinstall this product and is effective for one year from the original purchase date.

CALIBER[®]

952-985-9999

www.caliberproductsinc.com

CI5016