



## Follow directions for installing chains Apply as tightly as possible by hand for maximum life

1. Lay chains out flat, remove all tangles. When chains are placed on tires, the V-BARS should face out and cross chain hook eyes must face up. DAMAGE to your tires could result if V-BAR or hooks face against tires. (SEE DIAGRAM #1)
2. Lay chain over tire, cross chain hook eyes up and SPECIAL fastener on the outside of tire. Tuck the first cross chain (side chain ends without fasteners) under tire. (SEE DIAGRAM #2)
3. Move tractor until SPECIAL fastener is axle high. (SEE DIAGRAM #3)
4. Fasten INSIDE hook to proper link of INNER side chain that will allow the cross chain to be straight across the tire tread. (SEE DIAGRAM #4)
5. Remove slack and hook outside fastener. Make chain as tight as possible by hand without the use of tools. Drive approximately 1/4 mile, stop and retighten. (SEE DIAGRAM #5)

DIAGRAM 1

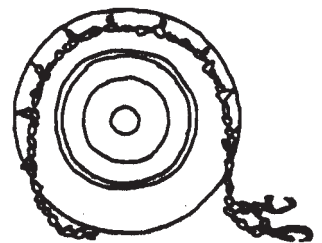
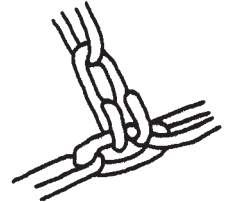


DIAGRAM 2

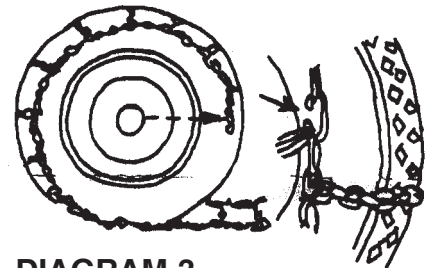


DIAGRAM 3

DIAGRAM 4

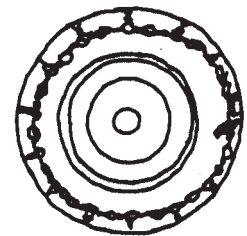


DIAGRAM 5

### \* \* \* CAUTION \* \* \*

Check owner's manual for correct tire pressure  
Maintain a tight to snug fit throughout use - adjust periodically to keep cross chains straight cross tire tread.  
Excessl links of side chain can be removed or wired back.  
**ACCELERATE SLOWLY!**  
**DO NOT EXCEED 5 MPH.**  
Avoid locking wheels when braking.  
**REMOVE** tire chains on bare roads.  
Avoid hitting curbs with tire chains.

Thank you for choosing HPE for your snowmobiling needs.