




## INSTALLATION INSTRUCTIONS

### Torque Link #900-557

- 1) Position angle bracket with angle toward center of engine and bolt to engine using bolts.
- 2) Using the rod end as a template, mark and drill a 3/8" (10mm) hole into bulkhead brace near shock mount.
- 3) Install bolt into hole drilled in step 2 and attach nut.
- 4) Adjust sleeve to desired tension
- 5) Set jam nut.

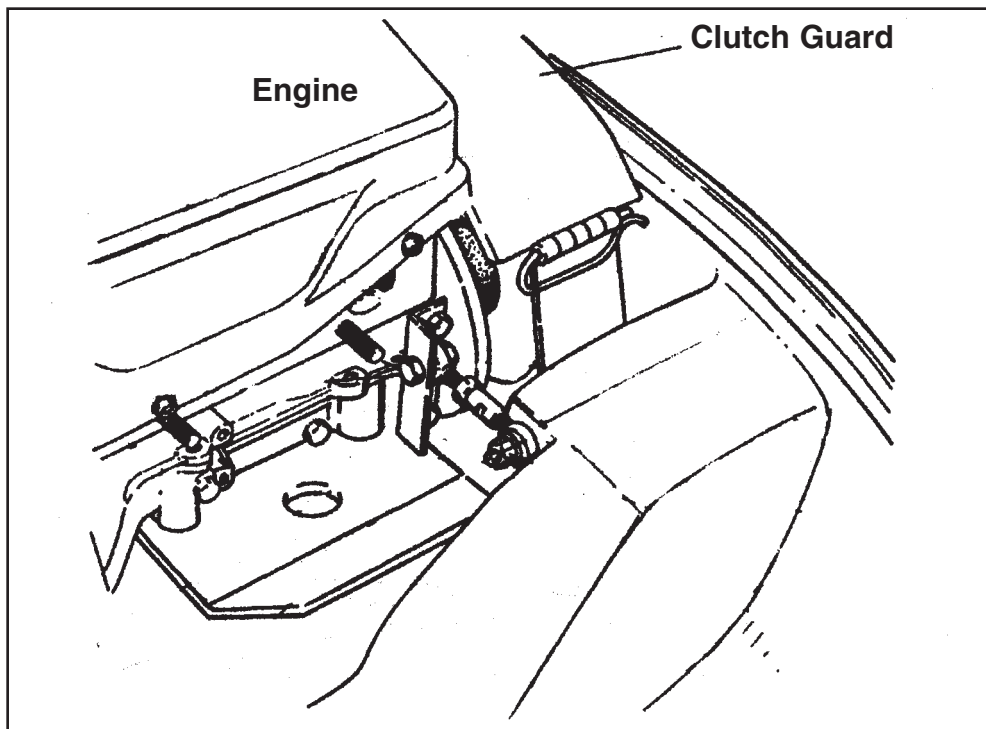

Thank you for choosing HPE for your snowmobiling needs.