


SLP Ski-Doo Torque Arm

P.N. 23-26 For Ski-Doo 583-670 Formula Z, 670 Summit & Summit X

- 1) Attach formed two bolt bracket to front of crankcase, with short side up, or damper closest to top.
Use bolts supplied with kit (2-8mm)
- 2) Attach single bolt bracket to bulkhead. Will require a 3/8" hole drilled into the bulkhead & drilling out a rivet in the bulkhead mount bracket.
- 3) Be sure the center to center and offset adjustments are correct.
- 4) Adjust damper nut to snug position then tighten an additional 1/2 turn.

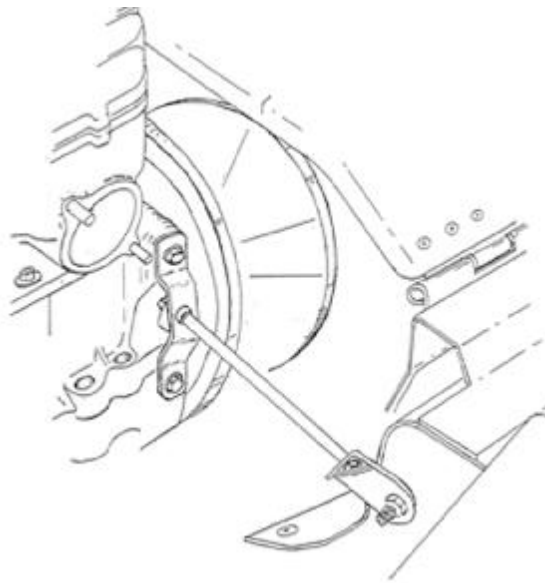

SUPPLIED PARTS:

- 1- 3/8" x 1 1/4" Bolt
- 1- 3/8" Nut
- 1- 3/8" Flat Washer
- 1- 3/8" Lock Washer
- 1- Rubber Grommet
- 2- 5/16" Lock Washer
- 2- 8 x 1.25 x 20mm Bolt
- 1- 3/8" Nylock Nut
- 1- 16 x 3 1/2" Grade 8 Bolt